


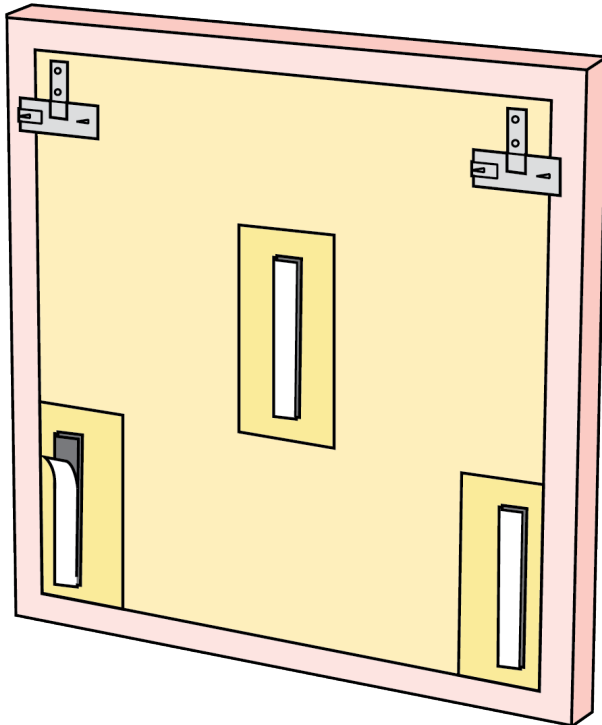

## z-bar with hook & loop



The following are guidelines given in good faith to help avoid common errors. They are not intended to be a step-by-step list of instructions or a checklist, and it is assumed the installer has general construction knowledge. Conwed bears no responsibility for any installation actions taken or not taken, and is not responsible for installer selection.

### Handling and storage

- Handle individual panels 'on edge' to avoid bending when moving and carrying.
- Store panels on a flat, dry, solid surface. Do not store on edge.
- Take necessary measures to keep panels dry, clean and free from dust. Pay special attention to edges.

### Planning the install

- 1** Review the materials list supplied by Conwed (Plant Order) and any drawings. Carefully determine the starting position of the first panel. Note markings on panel back include item number from packing list, then panel tag number.
- 2** In many cases, standing the panels against walls in numbered sequence is helpful.
- 3** Note that a minimum  $\frac{3}{4}$ " clearance at the panel top is required for Clip engagement.

### Installing z-clips with hook & loop

- Z-Clips are on the top row only, with Hook & Loop on the balance of the panel.
- Note; mounting gap from wall to panel Z-Clip is  $\frac{3}{16}$ ", versus  $\frac{1}{8}$ " for Hook & Loop. Panels will be slightly slanted.
- Measure the Z-Clip locations on the back of the panels and transfer to the wall. Chalking the clips and pressing the panels to the wall can help with location.
- Prior to engaging Hook & Loop temporarily hang a panel or series of panels and check for correct positioning.
- With panels removed, remove the taped backing on the hook and loop.
- Engage the Z-Clips and lightly press the Hook & Loop against the wall, making sure positioning is exact, because the Hook & Loop fastener is designed for one application only. Damage to the wall or the panel may result from removal.

