




# Impaling Clip/ Adhesive

## Wall Mounting

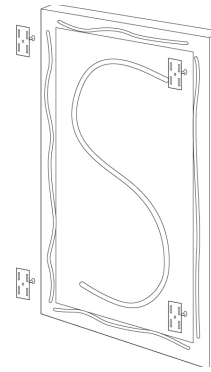

## Install Guide

### I. Handling & Storage

- Clean white gloves must be used whenever handling ceiling panels.
- Store panels on a flat, dry, solid surface. Do not store on edge.
- Keep panels dry, clean and free from dust and damage.

### II. Installation

1. The wall surface must be dry and free from dirt, dust, grease, loose paint, or any foreign matter that would interfere with a good adhesive bond. If the wall surface is not reasonably flat then panel alignment will be compromised.
2. Snap lines on wall both vertically and horizontally keeping lines plumb and square to create panel locations on the wall.
3. Impaling clips are designed to help hold panels in place until adhesive dries.
4. Use the following guide to determine the number of clips per panel:

<b>Width (in.)</b>	12	12	12	12	12	30	48	48	48	48
<b>Height (in.)</b>	48	84	108	132	144	48	48	84	108	132
<b># Clips</b>	3	4	5	6	6	5	5	8	10	12

5. Installers of Conwed products have successfully used the following construction mastics: PL 200, PL 400 (faster acting), Chemrex 200 and others. (This is not a product endorsement.)
6. Apply a 'picture frame' of adhesive about 1" from the edge (contacting the vinyl or fabric), and an 'S' or 'W' in the panel center. Position the panel against the wall, tilt back to release the solvents and then reposition.
7. Use perimeter adhesive as a wet shim to help align the panel faces.

**Disclaimer:** The following are guidelines given in good faith to help avoid common errors. They are not intended to be a step-by-step list of instructions or a checklist, and it is assumed the installer has general construction knowledge. Conwed bears no responsibility for any installation actions taken or not taken, and is not responsible for installer selection.