


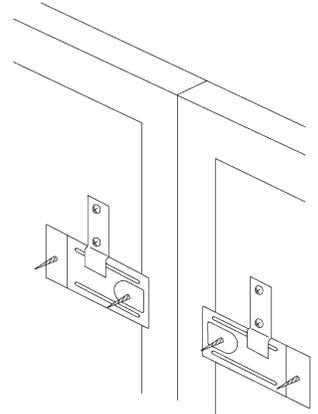

Z-Clip to Double Wall Bar

Wall Mounting



I. Handling & Storage

- Clean white gloves must be used whenever handling ceiling panels.
- Store panels on a flat, dry, solid surface. Do not store on edge.
- Keep panels dry, clean and free from dust and damage.


II. Planning the Install

1. Review the materials list supplied by Conwed (Plant Order) and any drawings. Carefully determine the starting position of the first panel. Note markings on panel back include item number from packing list, then panel tag number.
2. In many cases, standing the panels against walls in numbered sequence is helpful.
3. Note that a minimum $\frac{3}{4}$ " clearance at the panel top is required for Clip engagement.

III. Installing Double Wall Bar Bracket

4. Measure the Z-Clip locations on the back of the panels and transfer to the wall. Chalking the clips and pressing panels to the wall can help with location.
5. Use a laser or snap a line using Z-Clip locations to provide a double wall bar locating guide.
6. Snap Double Wall Bar in half for single applications (Fig. 1). Install Double Wall Bar brackets using appropriate mechanical fasteners for the mounting surface
7. Fir out hardware to compensate for uneven walls, assuring proper face alignment.
8. Install panel by holding against wall and lowering into place to engage clips. Ensure that all Z-Clips are engaged.
9. Add a 'dab' of adhesive to mating Z-Clip surfaces to prevent unwanted movement.

Fig. 1

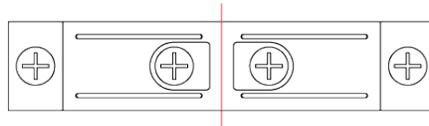

Snap in half for single applications

Disclaimer: The following are guidelines given in good faith to help avoid common errors. They are not intended to be a step-by-step list of instructions or a checklist, and it is assumed the installer has general construction knowledge. Conwed bears no responsibility for any installation actions taken or not taken, and is not responsible for installer selection.